# **DENTAL CHAIR** 037/039

# INSTALLATION and **OPERATION INSTRUCTIONS**

### **IMPORTANT**

This manual provides operating instructions for the 037/039.

The instructions contained in this booklet should be thoroughly read and understood before operating the chair.

After the installation is completed, keep this manual in a safe place and refer to it for future maintenance.





### TABLE OF CONTENTS

Page

Safety Precautions	1
Overview and Major Components	4
Dimensions and Specifications	5
Dimensions and Specifications (Europe Type)	6
Installation Procedures	7
Operation Procedures	8
Adjustment of Auto Positioning	10
Care and Maintenance	10
Maintenance and Inspection	11
Before Asking for Repairs	12
Electromagnetic Compatibility	13

### **SYMBOLS**

Following symbols are used in this manual of 037/039 CHAIR. Confirm the meaning of each symbol.

LP	Chair last position	0	Chair auto return	1	Chair preset1	2	Chair preset2
$\uparrow$	To raise the chair		To Recline the backrest	$\rightarrow$	To lower the chair	abla	To raise the backrest
`~	Chair manual control	$\sim$	Alternating current	<b>(</b>	Protective earth (ground)	SN	Serial number
((•))	Non-ionizing radiation	EC REP	Authorized representative in the European community	***	Manufacturer	M	Date of manufacture
Â	Caution It means "caution, warnings, or possibility to danger".	Z	Separate collection for electrical and electronic equipment	★	Type B Applied Parts	<b>③</b>	Refer to instruction manual/booklet

### **Intended Use of the Product**

This product is intended for the exclusive use for diagnoses, treatments and relative procedures of dentistry, and must be operated or handled by the qualified dentists or by dental staffs under the supervision of the dentist.

Such dentists or dental staffs should instruct and/or assist the patients to approach to and leave from the product.

Patients should not be allowed to operate or handle the product unless he/she is so instructed.

### **Environmental Requirements**

Ambient Temperature Operating  $+5^{\circ}\text{C} - +40^{\circ}\text{C}$  Storage  $-10^{\circ}\text{C} - +50^{\circ}\text{C}$ 

Humidity 10 % - 80%

Atmospherical Pressure 600 hPa - 1060 hPa

### **Important Notes**

In case of the troubles, please contat Takara Belmont offices or your dealers.

Do not disassemble or attempt to repair.

Disassembly, repair or modifications shoul only be done by a qualified repair technician.

Attempts at disassembly, repair or modifications may lead to abnormal operation and accidents.

### In case of disposal of equipment

When disposing the chair, appropriately dispose complying with all current applicable regulations and local codes.

In EU area, EU directive 2002/96/EC on waste electrical and electronic equipment (WEEE) is applied on this product. In this directive, environment conscious recycling/abandonment is obligated.

### SAFETY PRECAUTIONS

- Before use, read the "Safety precautions" carefully to ensure proper use.
- The following information is designed to ensure safe use of this product and to prevent injury and damage to you and others. The precautions contained here are classified depending on the severity and degree of imminence of possible injury or damage resulting from improper use. Be sure to follow all the information, which is important for safety.

Classification of precautions	Severity and degree of imminence of possible injury or damage
<b>M</b> WARNING	This symbol indicates that "ignorance of these precautions may lead to severe injury or even death as a result of improper use."
<b>A</b> CAUTION	This symbol indicates that "ignorance of these precautions may lead to mild or moderate physical injury or damage to property as a result of improper use."
NOTICE	This symbol indicates that "it is recommended to follow these precautions for safety."



1. Be sure to turn off breakers for equipment in the clinic when this product will not be used for a long period of time

Be sure to turn off breakers for equipment in the clinic when this product will not be used for a long period of time (following the completion of work, during the suspension of business, etc.). Insulation degradation may cause electrical fire.

2. Be sure to turn off the main switch upon completion of work or during work breaks

Be sure to turn off the main switch upon completion of work or during work breaks. This prevents incorrect operation due to accidental contact and associated hazards.

3. Do not sit on other than seat

When the backrest is at the forward position. do not sit on or place an undue load on the headrest or legreat of dental chair. This could cause the unit to topple or could damage the unit.

4. Do not place an undue load on the arm

Do not get on or place an undue load on the dental chair armrest. This could cause the unit to topple or other accidents.

5. Connect to an appropriate power source

This equipment must be connected to an appropriate power source.

6. Be sure to establish a grounding connection

Be sure to establish a proper grounding connection. (Refer to a vendor for grounding connection.) Failure or electric leakage may lead to electric shock.

7. Never disassemble, repair or modify this product

Individuals other than certified repair technicians should not disassemble or attempt to repair and modify this product. This could lead to an accident, failure, electric shock or fire.

8. Use with caution in the presence of electromagnetic interference waves

Do not place this product around equipment generating electromagnetic waves (including communications equipment, elevators, etc.) as incorrect operation of this product may occur in the presence of electromagnetic interference waves. Do not use equipment generating electromagnetic waves, such as mobile phones, around this product.

### SAFETY PRECAUTIONS



### 9. Be sure to turn off the main switch when electrocautery is in use

Be sure to turn off the main switch when electrocautery is in use, because noise may cause incorrect operation of this product.

### 10. Ensure the maintenance of this product

- Failure to maintain this product may lead to physical injury or property damage.
- Refer to the section of maintenance.

### 11. Immediately wipe off any water spills or leakage on the floor

Immediately wipe off any water spills or leakage on the floor. Decreased strength of the floor may lead to physical injury including fall, or property damage.

### 12. Use with caution on patients with a cardiac pacemaker

Use this product with extreme caution on patients with a cardiac pacemaker. In the case of any abnormalities in patients during use, immediately turn off this product and discontinue use.



### 1. Only experienced personnel should use this product

Only dentists or other dental professionals should use this product.

### 2. Confirm safety before use.

Before use, confirm that the parts are correctly and safely operating and that there are no obstacles around this product.

### 3. Pay attention to patients and children

Keep your eyes on patients (especially, children) so that mischief or inadvertent operation of equipment will not lead to unexpected accidents.

### 4. Discontinue use if you feel that "something is wrong"

Always be careful to inspect this product for looseness, rattling, tilting, wobbling, sounds, temperature, odors, etc. Immediately discontinue use at the first feeling that "something is wrong."

### 5. keep your eyes on the patient during operation.

- Confirm that the patient is seated in the proper position. Keep your eyes on the patient during the operation.
- Pay special attention to surroundings at automatic operation of the dental treatment table. Damage to the backrest, stool or Doctor's table may occur.

### 6. Do not smack or rub this product

Do not smack or rub this product forcefully. This could cause damage to covers or defective function.

#### 7. Precautions for cleaning the resin cover

For cleaning, do not use cleaning agents containing solvent or abrasives, thinners or oil-based alcohol (butanol and isopropyl alcohol), which may cause cracks.

### SAFETY PRECAUTIONS

## **A**CAUTION

### 8. Be sure to operate switches with your hands

Be sure to operate switches with your hands, except the foot controller, which is operated with your foot. Operation with body parts other than hands may cause damage or incorrect operation.

### 9. Pay attention during the headrest operation

Do not allow hands, fingers, or hair to become entangled in the moving parts of the headrest during operationg

### 10. Precautions for cleaning

- Never use sandpaper, metal scrub brushes and abrasive cleaning agents to clean the unit.
- Do not use strongly acidic cleaning agents or alkaline pipe cleaning agents to avoid corrosion of metals, etc.

### 11. Read the documents accompanying the various pieces of equipment

Before use, be sure to carefully read the package inserts and Instruction Manuals accompanying the various pieces of equipment (including optional articles) to ensure proper use.

### **NOTICE**


### 1. Troubleshooting and contact information

In the case of any problems, discontinue use, turn off the main switch and contact the dealer or our company.

### 2. Handling of equipment in the case of a power failure

Put the handpiece in the holder and turn off the main switch if equipment stops working during use due to a power failure or other reasons.

### 1. OVERVIEW AND MAJOR COMPONENTS

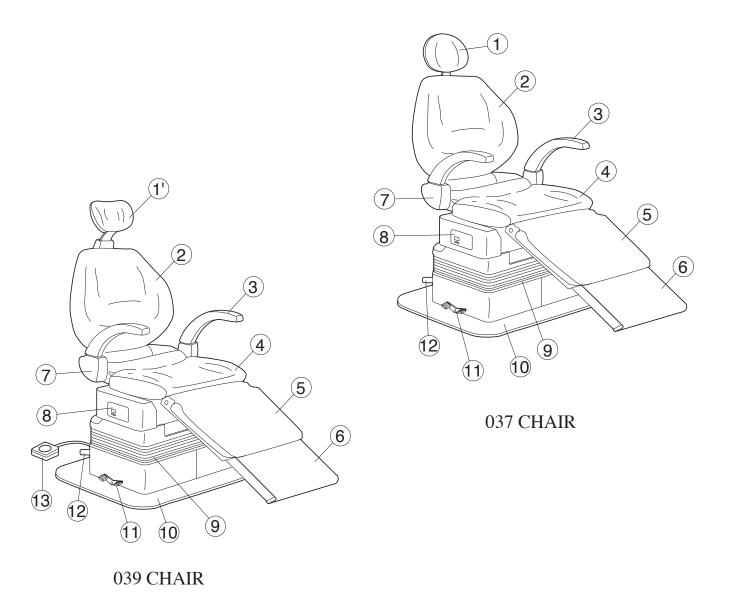


- (1) ARTICULATING HEADREST
- (1') POWER HEADREST
- (2) BACKREST
- (3) ARMREST
- (4) SEAT
- (5) LEGREST
- (6) RETRACTABLE FOOTREST

- (7) ARMREST BLOCK
- (8) CHAIR PRESET PANEL
- (9) BELLOWS
- (10)BASE PLATE
- (11)ROTATION LOCK PEDAL
- (12)FOOT SWITCH (CHAIR)
- (13)FOOT SWITCH (HEADREST)


Fig. 1-1 OVERVIEW

### 2. DIMENSIONS AND SPECIFICATIONS

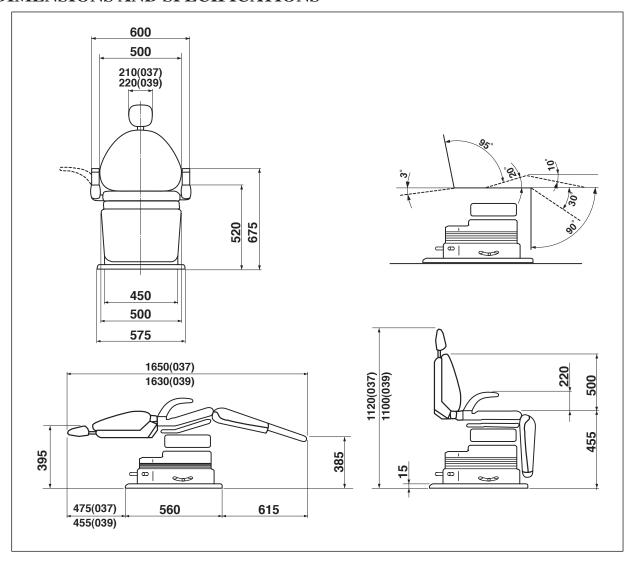

Chair Height	- 455mm		
Seat Elevation Stroke	- 260 mm		
Headrest Extension	- 120 mm		
Legrest Extention	- 230 mm		
Hydraulic Fluid	- 900 cc		
Type of Motor Pump	- 5LP		
Power Consumption	- AC230V 50Hz 2.1A		
Fuse	- 5A/250V(Current Rating:50A at 250VAC) Fast-blow		
Chair Weight	- 150 Kg (037)		
	154 Kg (039)		
Maximum Load	- 135kg		
Class of Foot Swirch	- IPX1 (applicable standars,IEC60529)		
Applied Parts Type B applied part : Seat for chair			
Mode of Operation	Non-Continuous Operation		
	ON time:3 min, OFF time:15min		
Service Life	- 10 years		

### 2. DIMENSIONS AND SPECIFICATIONS (EUROPE TYPE)

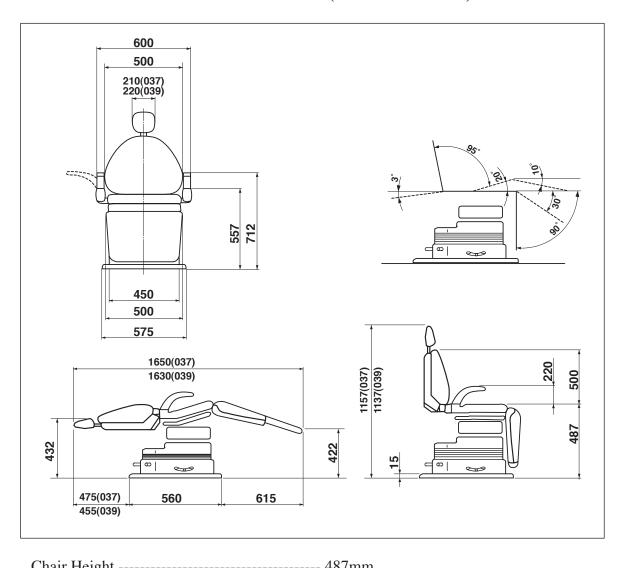

Chair Height	- 48'/mm		
Seat Elevation Stroke	- 300 mm		
Headrest Extension	- 120 mm		
Legrest Extention	- 230 mm		
Hydraulic Fluid	- 900 cc		
Type of Motor Pump	- 5LP		
Power Consumption	- AC230V 50Hz 2.1A		
Fuse	- 5A/250V(Current Rating:50A at 250VAC) Fast-blow		
Chair Weight	- 150 Kg (037)		
	154 Kg (039)		
Maximum Load	- 135kg		
Class of Foot Swirch	IPX1 (applicable standars,IEC60529)		
Applied Parts	Type B applied part : Seat for chair		
Mode of Operation	Non-Continuous Operation		
	ON time:3 min, OFF time:15min		
Service Life	- 10 years		

039 : After Ser. No. DDA080219 037 : From 1997 October Production

#### 3. INSTALLATION PROCEDURES

- 1) Place chair crate just behind the planned location for the chair.
- 2) Open the crate and remove all packing materials.

(Do not use sharp instrument that can damage upholstery.)

Slide the chair off palette into the place.

### DO NOT LIFT THE CHAIR BY ARMRESTS OR BACKREST.

- 3) Once the chair is located, but BEFORE PLUGGING INTO POWER, do the followings;
  - (1) Remove red bolt with a caution tag located on chair seat-plate.
  - (2) Grasping red tag on bellows, pull out rubber plug of oil reservoir.
  - (3) Save above red bolt and rubber plug in case the chair is ever reshipped in the future.
- 4) Remove 3 nuts and washers under the seat.

Attach the seat on seat-plate and fix it by screwing the nuts and washers from underneath the seat-plate.

- 5) Attach bellows to bellows support.
  - (1) Loosen and remove 4 Phillips screws on bellows support-rear, then remove the bellows support-rear from the chair.
  - (2) Hang the top plate of bellows on the edge of bellows support-front, and hang the top-rear plate of bellows on the edge of bellows support-rear.
  - (3) Reattach bellows support-rear with hanging bellows on to the chair by screwing 4 Phillips screws.
- 6) Unpack the small carton containing accessories. Check following items in it.

Headrest Assembly (037)......1 pce.

Flat Head Wood Screw (Pie.4.8 - 40) ......... 4 pcs.

For an 037 chair, slide headrest into slide mount on top of backrest.

### 7) Fixing the chair on the floor

Fix the chair base on the floor with bolts.

Chair base fixing points are shown in figure 3-1.

In case of wood floor, fix the chair base

with attached flat head wood screws.

In case of concrete floor, fix the chair base

with attached anchor plug and flat head wood screws.

### **ACAUTION**

Chair must be fixed to the floor with bolts to prevent from falling down.

When fixing chair to the floor, be careful not to damage pipings under the floor.

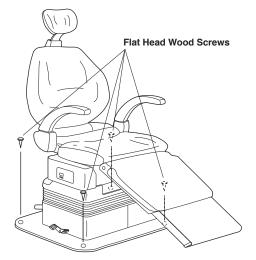


Fig. 3-1 Fixing chair on the floor

### AFTER INSTALLATION


Once the chair is installed according to above steps, check the all chair function following the operation procedures in this booklet.

#### 4. OPERATION PROCEDURES

The Belmont 037/039 chair was designed for maximum simplicity of operation. However, taking a few moments to familiarise yourself with the operation of the chair will make it's operation comfortable and simple for you and your patients.

Plug the chair into an appropriate electric power source.

Turn on the Main Switch located on left side of Pump Cover. (See Fig. 4-1.)

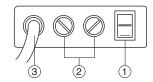

1 MAIN SWITCH

② FUSE (5A)

3 POWER CORE

### **Basic Control Function:**

Chair manual control functions are duplicated on both sides of the pump cover.

Chair auto control functions are equipped on rear side of the pump cover.

A separate foot control is used with the power headrest (039).

### 1) Chair Manual Controls (See Fig. 4-l.)

(1) Seat Height Control

To raise: Move either side mounted foot switch up.

To lower: Move either side mounted foot switch down.

(2) Backrest Control

To raise : Move either side mounted switch right. To reclining : Move either side mounted switch left.

### 2) Chair Auto-mode Controls (See Fig. 4-l.)

### (1)Preset Mode Controls

037/039 chair has two preset positions and last position memory. To place the chair in each position with footrest extension. Momentarily move the foot switch located on rear side of the pump cover.

Preset 1: Move rear mounted switch left.

Preset 2: Move rear mounted switch right.

LP: Move rear mounted switch up.

#### (2) Auto-return Control

To return the chair to the patient entry position (fully lowered with the footrest retracted), momentarily move rear mounted foot switch down.

### 3) Power Headrest Controls (039) (See Fig. 4-1.)

(1)To extend : Press down upper area of foot control disc.
 To retract : Press down lower area of foot control disc.
 (2)To move back : Press down right side of foot control disc.
 To move forward : Press down left side of foot control disc.

### 4) Articulating twin axis prosthetic headrest adjustments (037) (See Fig. 4-2.)

Articulating twin axis prosthetic headrest adjusts to match patient's anatomy, looks securely in any desired position.

To extend: Simply pull up to desired position.

To retract: Depress to desired position.

### 5) Safety Stop

Automatic travel in all automatic mode can be instantly cancelled at any time by momentarily pressing any control switch.

### 6) Armrest Rotation (See Fig. 4-3.)

Either armrest can be rotated outward by pulling.

### 7) Chair Rotation (See Fig.3-l.)

Release rotation lock by pressing "N" footpad and lock chair in desired position by pressing "L" footpad.

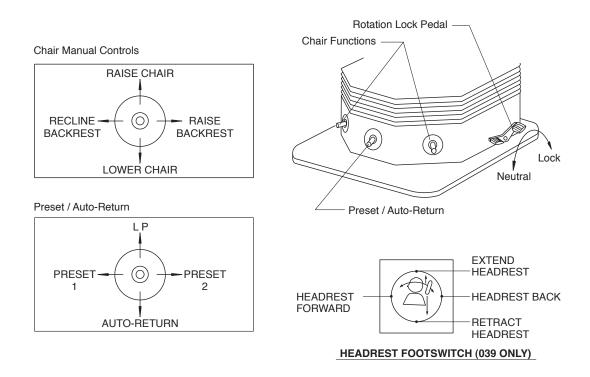


Fig. 4-1 Control Switch Location & Function



Fig. 4-2 Headrest Adjustment

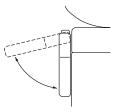


Fig. 4-3 Armrest Rotation

#### 8) AUTO MODE POSITION ADJUSTMENT

(1) Preset position Adjustment

Two preset positions can be set.

- A. Set the seat and the backrest to the desired preset position by manual control switch.
- B. Keep depressing Preset-1 switch (1) until buzzer sounds (in about 3 seconds), then release it.
- C. The position is memorized for Preset-1.
- D. Preset-2 can be memorized by depressing Preset-2 switch (2), as following A to C.

### (2) Mouth Rinsing Position Adjustment

Mouth rinsing position in last position memory movement can be adjusted.

- A. Set the backrest to the desired mouth rinsing position by manual control switch.
- B. Keep depressing last position memory switch (LP) until buzzer sounds (in about 3 seconds) and release it.
- C. This backrest position is then memorized as the mouth rinsing position.

#### 5. CARE AND MAINTENANCE

#### **Chair Cleaning**

- The surface of the chair's seating area is made of synthetic leather. Apply dry wiping or wipe the surface with cloth moistened with either water or diluted neutral detergent for the care.
- If the color of clothing or belt remained on the synthetic leather, wipe it off with cloth moistened with diluted neutral detergent as soon as possible, to avoid its penetration caused by plasticizer.
- In case the synthetic leather is wiped with a wet cloth, fully wipe off the moisture. If it remains, hydrolytic degradation may be accelerated. Do not use solvent or bleach.
- Apply dry wiping using a dry and soft cloth to metallic areas. If any metallic area is wetted, wipe off the moisture as soon as possible. It will rust otherwise.
- Wipe the resin cover with a wet and soft cloth.

#### **Chair Sterilization**

Use FD333 made by Durr sprayed to a soft cloth or paper towel for cleaning and sterilization of the product exterior. Do not operate the product until the liquid used for sterilization has fully dried up.

### **ACAUTION**

Do not place any hard and heavy article or any article having a sharp tip or edge on the chair's seating area. The synthetic leather may be damaged otherwise.

For cleaning the resin cover, do not use solvent or detergent containing abrasive agent. In addition, do not use any chemical that is other than specified for this unit. The resin cover may crack otherwise.

Use a soft cloth moistened with either water or diluted neutral detergent. Never use detergent of strong acidity or alkali pipe detergent, or materials including metal may be corroded.

### **ACAUTION**

Turn OFF the main switch at the lowest seat position after daily operation and for a long term interval.

### 6. MAINTANANCE AND INSPECTION

### 6-1. Guide for daily maintenance and inspection (Maintenance and inspection by user)

Management of maintenance and inspection of medical equipment should be implemented by the user (medical institution). In case the user does not implement such management, it is permitted that such management is outsourced to a qualified entity such as a medical equipment repair company. For safe use of this product, it is necessary that inspection should be conducted in the specified frequency on the items described below.

No.	Item	Frequency	Inspection method and diagnosis	Influence if inspection not conducted	Maintenance required in case of nonconformity
1	Check of safety functions	Before start	During pre-set movement or auto-return movement, press any key for chair operation and the chair should automatically stop.	Unexpected personal injury and troubles may arise due to motion of the chair during medical treatment and due to pinching between doctor section and chair.	Contact your dealer or our office if any abnormality arises.
2	Power supply cable	Before start	Power supply cable should not be abnormally bent, pintched or damaged, and the plug should be firmly inserted to the power outlet and not covered with dust.	Accident or defect of the equipment	Clean and rearrange the cable. For replacement, contact your dealer or our office.
3	Function of each switch	Before start	Each switch for chair operation should work correctly.	Defect of movement may cause an accident.	Contact your dealer or our office if any abnormality arises.
4	Moving parts	Before start	Make sure that the chair does not make any abnor- mal noise during automatic and manual movement	Accidend or defect of the equipment	Contact your dealer or our office if any abnormality arises.
5	Oil leakage	Before start	Make sure that there is no hydraulic oil on the floor or chair base leaking from the cylinder.	Defect of the equipment	Contact your dealer or our office if any abnormality arises.
6	Wiping off water	After closing	Make sure that no water is left that were spilt during treatment.	Water will cause rust	Wipe off water with a soft and dry cloth.
7	Stain removal of external parts	After closing	Visual check the attachment of dust, chemicals or drug and grasp the total product condition	Discoloration, transfor- mation or breakage of resin parts may arise.	Clean up according to the "CARE AND MAINTANANCE " in operating instructions.
8	Main power switch	After closing	Make sure that the main power switch is off	Accident or defect of the equipment	In the case the main power cannot be turned off, contact your dealer or our office.

### 6-2. Guide for Periodical Check-up

- Some parts and components of the products are degraded or deteriorated depending on the frequency of use. Annual check-up and maintenance, as well as replacement of consumable parts, are required.
- The required parts (including consumable parts) are listed below. It may be different from the following list depending on the option of the unit.
- For check-up and repair, call a technician of our authorized dealer.

### Parts and components that require periodical check-up

No.	No. Parts Description	
1	Moving part	7 years
2	Electric wiring of moving parts	5 years
3	Switches	5 years
4	Control PCBs	5 years

### Consumable parts

No.	Parts Description
1	O-ring, Packing, Diaphragm



Execute the maintenance in accordance with this instraction manual and operating manual attached to each individual equipment ( Dental light, Handpiece, etc..) .

Failure to maintain this product may lead to physical injury or property damage.

### 7. BEFORE ASKING FOR REPAIRS

If any of phenomena described below has occurred, make the following checks before asking for repairs.

Phenomenon	Check point and result	Action to be taken
The product does not	Main switch is not on.	Turn on the main switch.
	Equipment circuit breaker in the clinic cabinet panel is not on.	Turn on the equipment circuit breaker.

If the unit does not normally work even if actions were taken upon checkup stated above, then stop using the unit, turn off the main switch and contact your dealer or our office.

### 8. ELECTROMAGNETIC COMPATIBILITY

Medical electrical equipment needs special precautions regarding EMC and needs to be installed and put into service according to the EMC information provided in this manual.

Portable and mobile RF communications equipment can affect medical electrical equipment.

The equipment or system should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the equipment or system should be observed to verify normal operation in the configuration in which it will be used.

Guidance and manufacture's declaration - electromagnetic emissions						
The 037/039(CHAIR) is interest.	The 037/039(CHAIR) is intended for use in the electromagnetic environment specified below. The customer or the user					
of the 037/039(CHAIR) shou	ld assure that it is used in s	uch an environment.				
Emissions test	Compliance	Electromagnetic environment - guidance				
RF emissions		The 037/039(CHAIR) uses RF energy only for its internal				
CISPR 11	C 1	function. Therefore, its RF emissions are very low and are				
	Group 1	not likely to cause any interference in nearby electronic				
		equipment.				
RF emissions	C1 D	The 037/039(CHAIR) is suitable for use in all				
CISPR 11	Class B	establishments, including domestic establishments and those				
Harmonic emissions	Class A	directly connected to the public low-voltage power supply				
IEC 61000-3-2	Class A	network that supplies buildings used for domestic purposes.				
Voltage fluctuations/						
Flicker emissions	Complies					
IEC 61000-3-3	_					

Guidance and manufacture's declaration - electromagnetic immunity						
The 037/039(CHAIR) is intended for use in the electromagnetic environment specified below. The customer or the user						
of the 037/039(CHA)	of the 037/039(CHAIR) should assure that it is used in such an environment.					
Immunity test IEC 60601 Compliance level Electromagnetic e						
	test level	_	guidance			
Electrostatic	±6 kV contact	±6 kV contact	Floors should be wood, concrete or			
discharge (ESD)	±8 kV air	±8 kV air	ceramic file. If floors are covered			
IEC 61000-4-2			with synthetic material, the relative			
			humidity should be at least 30%.			
Electrical fast	±2 kV for power	±2 kV for power	Mains power quality should be that			
transient/burst	supply lines	supply lines	of a typical commercial or hospital			
IEC 61000-4-4	±1 kV for input/output	±1 kV for input/output	environment.			
	lines	lines				
Surge	±1 kV differential mode	±1 kV differential mode	Mains power quality should be that			
IEC 61000-4-5	±2 kV common mode	±2 kV common mode	of a typical commercial or hospital			
			environment.			
Voltage dips, short	$<5\%$ $U_{\mathrm{T}}$	$<5\%$ $U_{\mathrm{T}}$	Mains power quality should be that			
interruptions and	$(>95\% \text{ dip in } U_{\mathrm{T}})$	$(>95\%$ dip in $U_{\rm T})$	of a typical commercial or hospital			
voltage variations	for 0.5 cycle	for 0.5 cycle	environment. If the user of the			
on power supply	$40\%~U_{\mathrm{T}}$	$40\%~U_{\mathrm{T}}$	037/039(CHAIR) requires continued			
input lines	$(60\% \text{ dip in } U_{\rm T})$	$(60\% \text{ dip in } U_{\text{T}})$	operation during power mains			
IEC 61000-4-11	for 5 cycle	for 5 cycle	interruptions, it is recommended that			
	$70\%~U_{\mathrm{T}}$	$70\%~U_{\mathrm{T}}$	the 037/039(CHAIR) be powered			
	$(30\% \text{ dip in } U_{\rm T})$	$(30\% \text{ dip in } U_{\text{T}})$	from an uninterruptible power supply			
	for 25cycle	for 25cycle	or a battery.			
	<5% U <sub>T</sub>	<5% U <sub>T</sub>				
	$(>95\% \text{ dip in } U_{\text{T}})$	$(>95\%$ dip in $U_{\rm T})$				
	for 5 s	for 5 s				
Power frequency	3 A/m	3 A/m	Power frequency magnetic fields			
(50/60 Hz)			should be at levels characteristic			
magnetic field			of a typical location in a typical			
IEC 61000-4-8			commercial or hospital environment.			
NOTE $U_T$ is the a.c. mains voltage prior to applications of the test level.						
. 01 11						

### Guidance and manufacture's declaration - electromagnetic immunity

The 037/039(CHAIR) is intended for use in the electromagnetic environment specified below. The customer or the user of the 037/039(CHAIR) should assure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance	
			Portable and mobile RF communications equipment should be used no closer to any part of the 037/039(CHAIR), including cables, than the recommended separation distance calculated from the equation applications to the Frequency of the transmitter.	
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz outside ISM bands <sup>a</sup>	3 Vrms	Recommended separation distance $d = 1.2\sqrt{P}$	
Radiated RF IEC 61000-4-3	3V/m 80 MHz to 2.5 GHz	3 V/m	$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz	
			Where <i>P</i> is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and <i>d</i> is the recommended separation distance in metres (m).	
			Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, a should be less than the compliance level in each frequency range.	
			Interference may occur in the vicinity of equipment marked with the following symbol:	

NOTE 1 At 80 MHz and 800MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by adsorption and reflection from structures, objects and people.

- a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the 037/039(CHAIR) is used exceeds the applicable RF compliance level above, the 037/039(CHAIR) should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the 037/039(CHAIR).
- b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3V/m.

### **Essential performance (purpose of IMMUNITY testing)**

Unless operated by the switches for chair control, the 037/039(CHAIR) does not make any movements, except for sounding a buzzer and switching on/off the indicator.

# Recommended separation distances between Portable and mobile RF communications equipment and the 037/039(CHAIR)


The 037/039(CHAIR) is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the 037/039(CHAIR) can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the 037/039(CHAIR) as recommended below, according to the maximum output power of the communications equipment.

	Separation distance according to frequency of transmitter			
Rated maximum output	m			
power of transmitter W	<b>150 kHz to 80 MHz</b> $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	<b>800 MHz to 2.5 GHz</b> $d = 2.3\sqrt{P}$	
0.01	0.12	0.12	0.23	
0.1	0.38	0.38	0.73	
1	1.2	1.2	2.3	
10	3.8	3.8	7.3	
100	12	12	23	

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by adsorption and reflection from structures, objects and people.

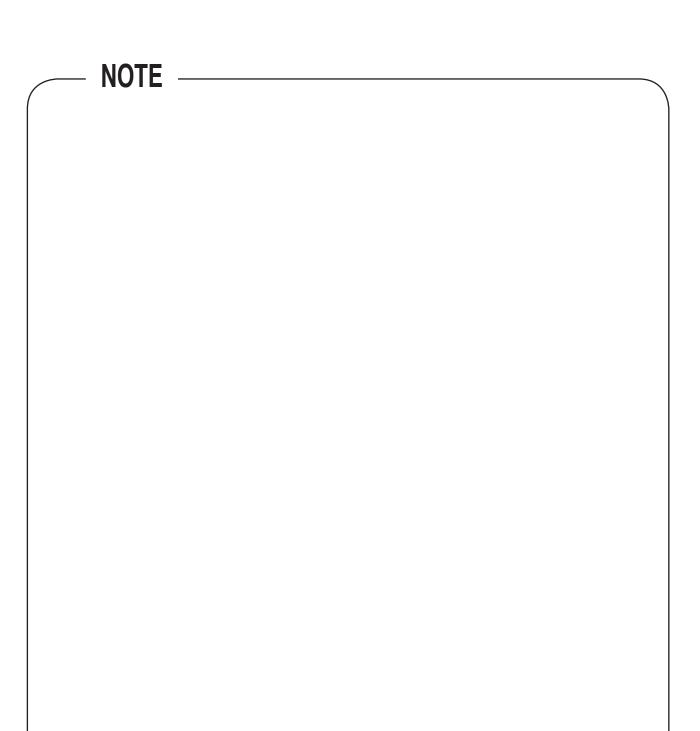



### Takara Belmont (UK) Ltd.

Belmont House

One St. Andrews Way, Bow,

London E3 3PA U.K.

Tel: (44) 20-7515-0333 Fax: (44) 20-7987-3596





### TAKARA BELMONT CORPORATION

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka 542-0083, Japan

TEL: 81-6-6213-5945 FAX: 81-6-6212-3680

BOOK NO. AEFS94H0

Printed in Japan 2012.04